

PANACOM
LIVING & LOVING TECHNOLOGY

User Manual


TV-1016 SMART TV BOX



4K ULTRA HD 2GB/16GB MEMORY CAPACITY

WIFI

Remote Control For Android TV BOX



- STANDBY: set into standby mode to
- MUTE : Press to close the volume of the player
- Go to media
- Go to music
- Go to web search
- Go to apps
- Volume up/down
- Go to previous page or next page
- Goes to Launcher home screen
- Previous page
- Direction Up down / left right
- Ok : confirm button
- Press to use mouse function
- Goes to application home screen
- Number Keypad 0-9
- Switch languages button
- DEL: Delete the input word

Introduction

Android TV BOX is an internet-connected television platform. Combining TV, PC, the entire web, and applications, Android TV brings a new experience into your living room.

With your Android TV Box, your HDTV now becomes an affordable interactive Home PC that can be enjoyed by the whole family

- Internet TV
- Internet Browser
- Multi Media player(Download or off memory)
- View and share photos
- Social network portal(Facebook, Twitter,Skype, etc.)
- Game player, send and receiver emails, and use paired applications

This player has multi video and audio outputs, which allow you to connect it to your HDTV, non-HDTV, monitor, speakers and amplifier. Plug a USB wecam into your android box, make a free video call to your friends on Skype.

Cautions

- When connect the unit to other devices, disconnect power first
- When connect the unit to other devices, read the user guide of other devices for safety cautions. Do not connect the unit to incompatible products.
- Do not interrupt the power while in the process of upgrading or uploading/ downloading the firmware, or when the storage card is inserted or removed, to avoid data loss or program error.
- Do not plug or unplug the power cable with wet hands. Unplug the power cable before cleaning the device. Wipe the unit with a soft piece of dry cloth.
- Disconnect the power when the device is unused for long periods of time or if it is damaged

What's in the box

- Android TV Box
- Remote Control
- HDMI Cable
- User Manual
- Power Adapter

Connection

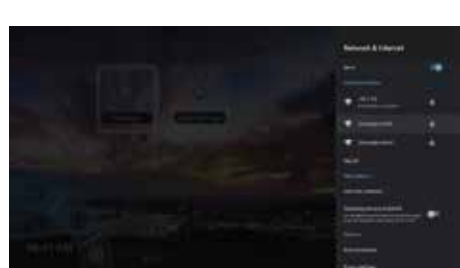
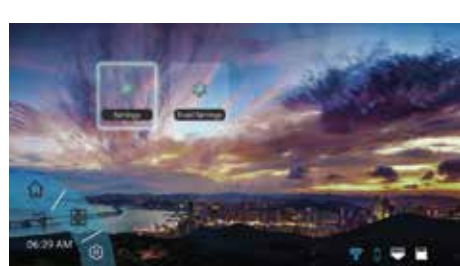
- DC jack: connects to power adapter (5V 2A)
- AV Out: connect AV cable
- Optical: optical digital audio output; connects to amplifier
- LAN: connects directly to Ethernet
- HD Out: connects HDMI cable to HDTV
- USB host: connects to USB devices
- Card Slot: connect to SD card

Turning on/off your Android TV Box

- Connect android tv box to other device before you connect power
- Power on: plug the power adapter to the power source, and then connect the power adapter to the power socket of your android tv. The system runs automatically, the starting logo appears and then the home screen displays.
- Power off: disconnect the power and the unit will turn off
- When the system is running, press power button on the remote control to put your android tv box into power off. When your android tv box is power off, press power button again to start it.
- LED indicators: when your android tv box is starting working, the blue light will on

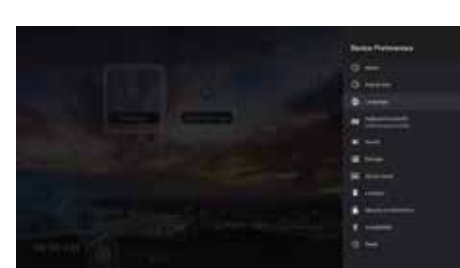

Choose Language

Settings->Device preferences->Language->choose language

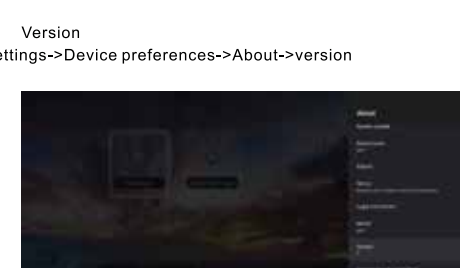
Date & Time

Settings->Device preferences->Date & Time

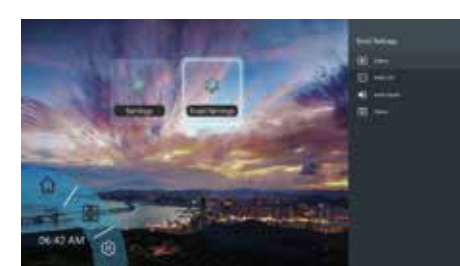
Version

Settings->Device preferences->About->version




Display

Settings->Droid Settings->Display to choose the display definition





Online Browser

After connect wifi or Ethernet, Choose app GOOGLE enter to view webpages and search information on the web



File Browser


Enter all APPs choose file browser -> you can choose local disk or your own USB disk


Enter USB disk to search the files you want

Manage APP

- Settings-> Apps->See all apps





- Select an item to view details
- You can choose to clear data, uninstall apps, stop running apps. You can also check the application version number



- To add an app on the home screen
- Click the icon to select the app you want to add, then press OK button to finish this step

To remove apps on home screen

Choose the app icon, press menu button, choose to remove the app from home screen

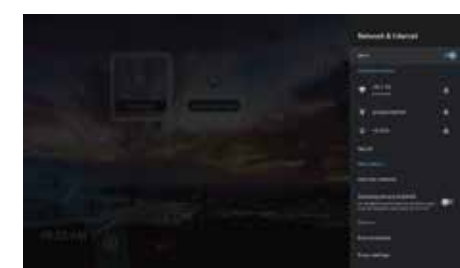
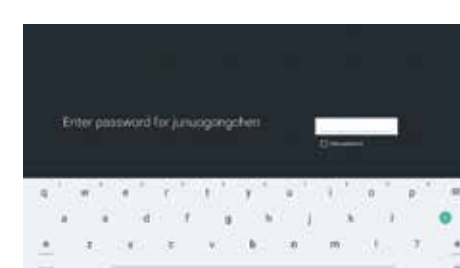
Wifi function

Home screen-> settings->network & Internet-> to open WIFI function




switch on WIFI, choose the WIFI

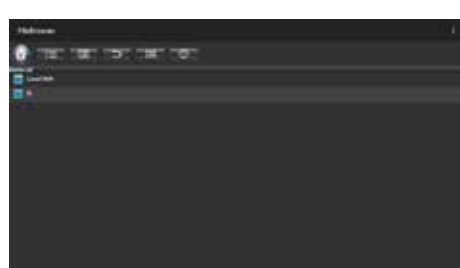

then input passwords for WIFI


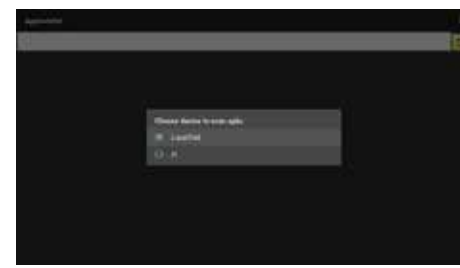
- Ethernet function**
- Home screen->settings->Network->select Ethernet to open Ethernet function, insert network cable, network will be connected automatically

APP Installer

Plug your USB disk first, Enter app installer, choose your USB disk, see all the apk, then choose to install it

Select the APK then start install

Trouble Solution

- No signal on the HDTV
 - Check if the HDMI cable is securely connected
 - Check if you have selected the correct HDMI input on your HDTV
 - Check if the power connect properly
- Cannot connect to network
 - Make sure the network cable is connected well
 - Make sure WIFI network is connected
 - Make sure you select the right IP address settings
- Remote control does not respond
 - Make sure the batteries are good
 - Make sure the distance between remote control and your android tv box is no more than 5 meters.

QUICK GUIDE

To start using your device, make sure to:

CONNECT TO YOUR WIFI NETWORK.

Settings - Network and Internet:

- Connect to your WIFI network.

CORRECTLY CONFIGURE THE DATE AND TIME, ALONG WITH YOUR TIME ZONE.

Settings - Device Preferences - Date and Time:

- Set your time zone, along with your date and time.

From this moment on, you can enjoy your device. Connect to Google Play through your account and download the applications you want. In case of connection problems, be sure to restart the device.

INTERNATIONAL WARRANTY

Terms and Conditions

- Panacom warrants the operation of this product to be free from any manufacturing and/or material defect for a period of 6 months from the date of purchase by the user.
- This warranty is limited to the repair and/or replacement of this product, according to our own criterion, free of charge within the stipulated term and it does not extend to consequential or incidental damages to other products that may be used with this unit.
- The warranty shall be voided in the following cases: a) repair or attempt to repair by third parties not authorized by the company, b) in case of performing any type of cut in connection cables, plugs, connectors, or other adapters different from the original ones provided by the company.
- To make this warranty effective, you shall contact the Authorized Service Center of your country and they shall carry out the pertinent procedure. In order to start the necessary procedure to get said warranty, you shall hand in the Original Purchase Invoice where the purchase date, dealer name and product identification shall be stated clearly.
- Transportation, freight, stay and/or insurance expenses, if any, are not covered by this warranty.

REPAIR SERVICE

To ask for customer service please call 0810-888-7262.